

SOLAR MOD SYSTEMS

AC Output Cable Replacement guide




1. Remove to top two screws, and top cover plate. (as seen above).



2. Remove the four screws on the front cover plate, then carefully remove the plate without disconnecting the cables on the other side.

3. Ensure that all breakers in the box are in the off position and that nothing is running before proceeding to step 4.

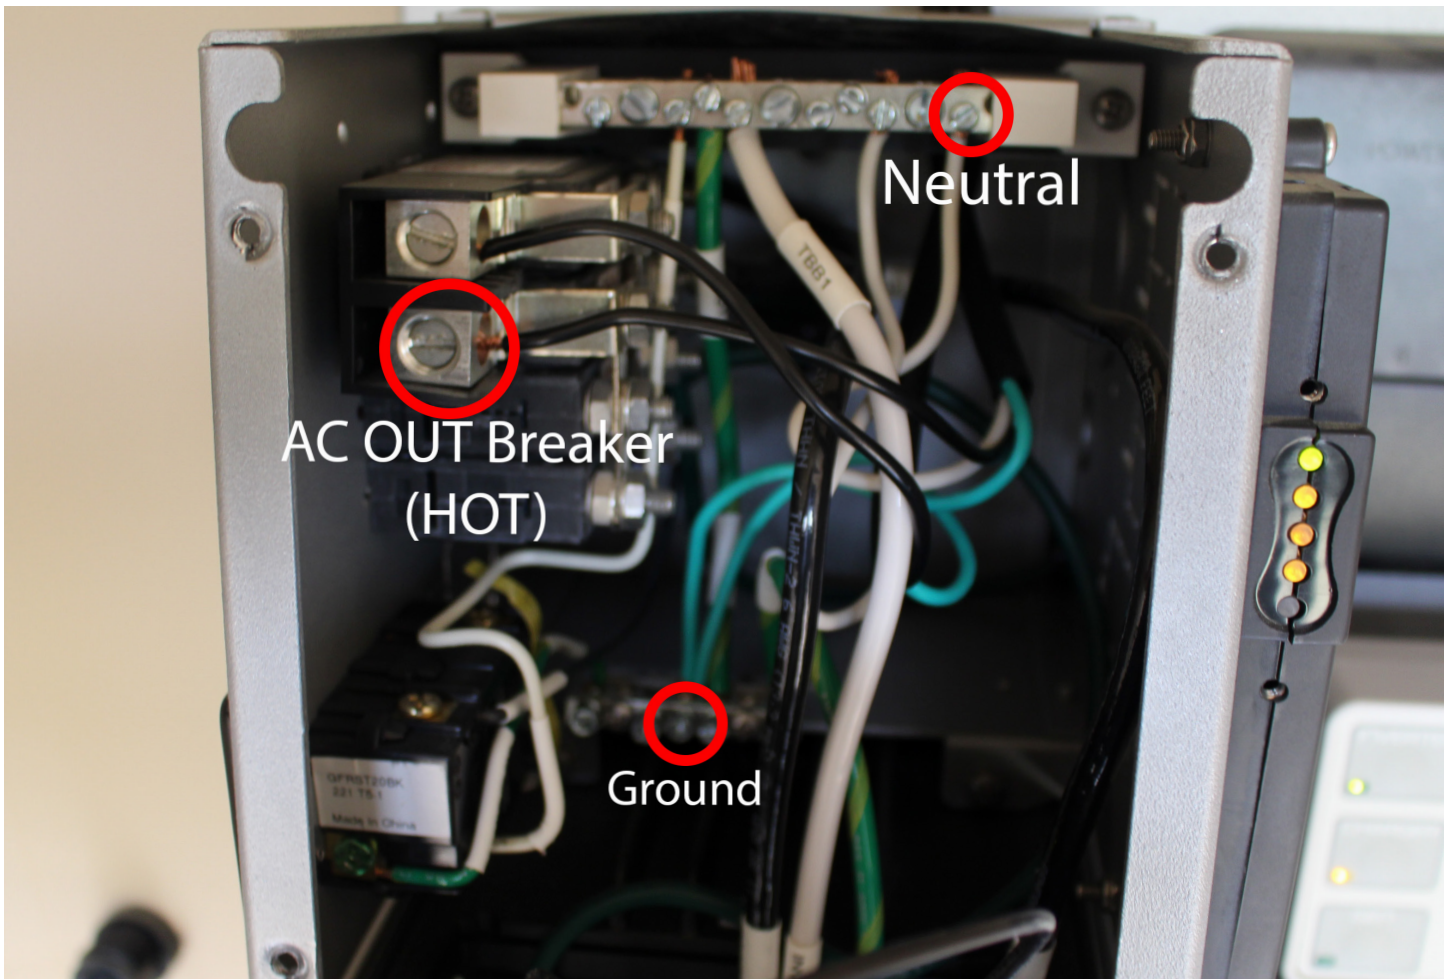

4. Using a flat head screwdriver, loosen the three clamps and remove wires shown above.
5. Pull the old Extension cord out through the hole in the top of the enclosure and remove it from the SGPC-2400.
6. Run your new AC extension into the Enclosure hole and put the matching leads into the clamps that you previously loosened.
7. Proceed to tighten the clamps back down using your flat head screwdriver
8. Replace the cover plates and screws in the reverse order you removed them, and turn the breakers back on. Your new extension is now live